


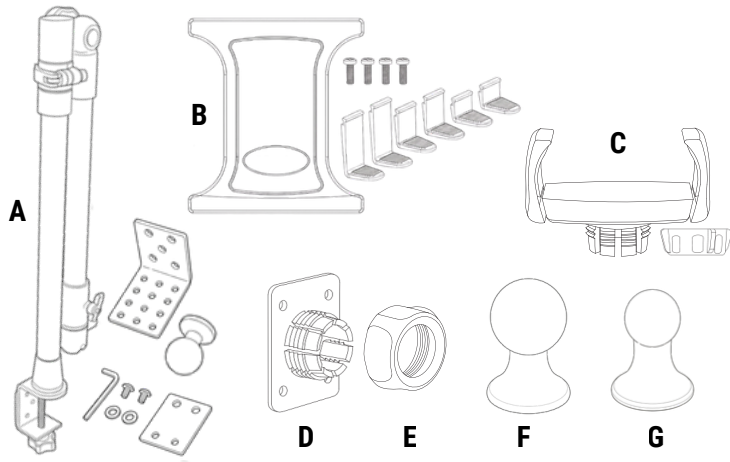

Packaging Contents

A. Adjustable Clamp Mount [HDDSLR01B]

- 1/4"-20 camera thread adapter
- 4-hole bracket plate
- screws (x2), nuts (x2), and hex key
- ceiling bracket

B. Tablet Holder [TAB001-AMPS]

- 10 adjustable legs (short x4), (medium x2), (long x4)
- screws (x4)

C. Phone Holder with Ring [MG005WRB]

D. 22mm Ball Socket to AMPS Plate [SP-SB-AMPS-22]

E. 22mm Tightening Ring [SP-SB-RING-22]


F. 22mm Ball to Camera Thread Adapter [SP142022MM]

G. 17mm Ball to Camera Thread Adapter [SP142017MM]

Important: Clean the surface of dirt, dust, and grease before installation.


Clamp Mounting

Turn the bottom knob of the clamp to adjust to the desired height.

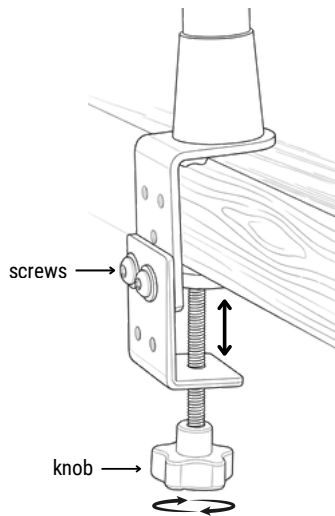

Extra Height

Remove the two screws with the included hex key, install the 4 hole bracket between the brackets, then reinstall and tighten the screws.

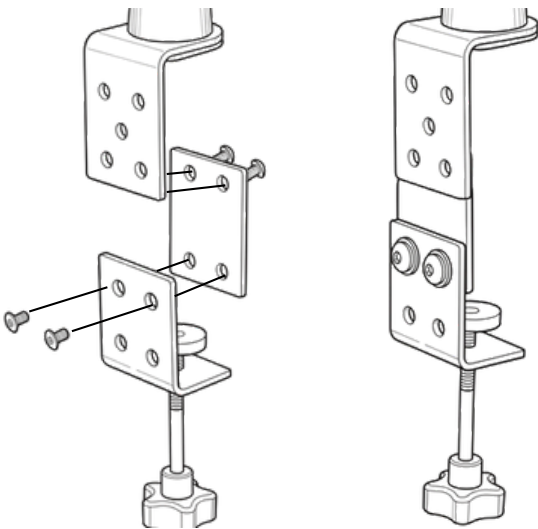


WARNING
CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system.

WARNING
Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Ceiling Mounting

Attach the ceiling bracket to a wood frame or drywall surface using suitable screws (not included).

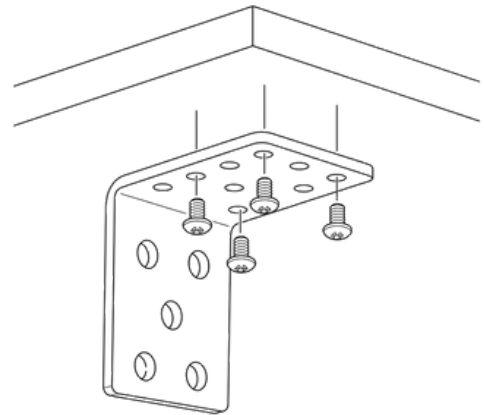


Attaching to Ceiling

Align the clamp with the ceiling bracket holes. Insert all included screws and tighten them securely to ensure the clamp is properly attached.

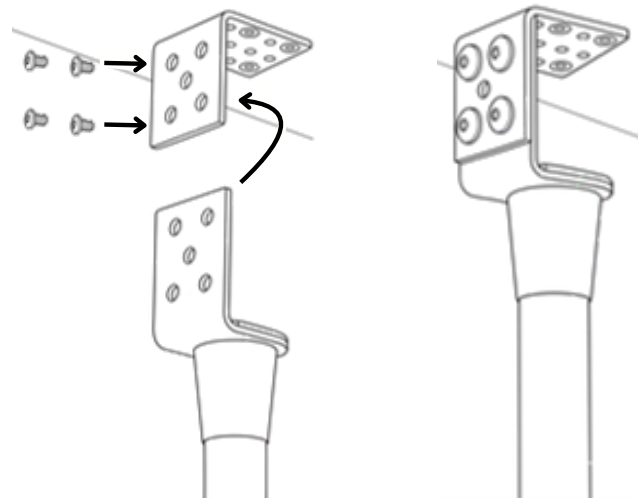


Connect the Clamp Mount to the 1/4"-20 Adapter

Push the inner piece of the knob inward and turn the handle left to loosen it. Insert the ball into the clamp mount socket, then turn the handle clockwise to tighten and secure the 1/4"-20 adapter in place.

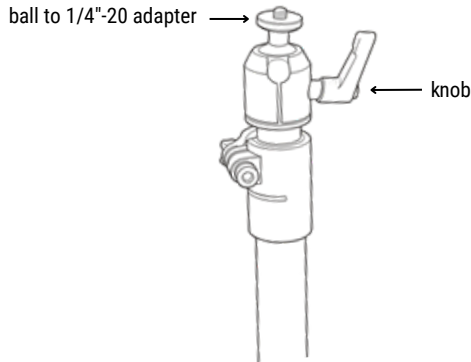


Attach the Tablet Holder

Align the AMPS adapter to the tablet holder using the included screws. Place the 22mm tightening ring over the ball, insert the ball into the holder socket, and tighten the ring securely.

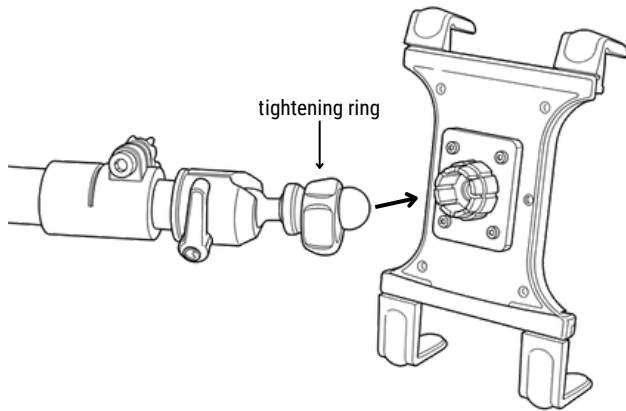

Install Your Device

Attach your preferred device setup to the mount and adjust it as needed for your application.

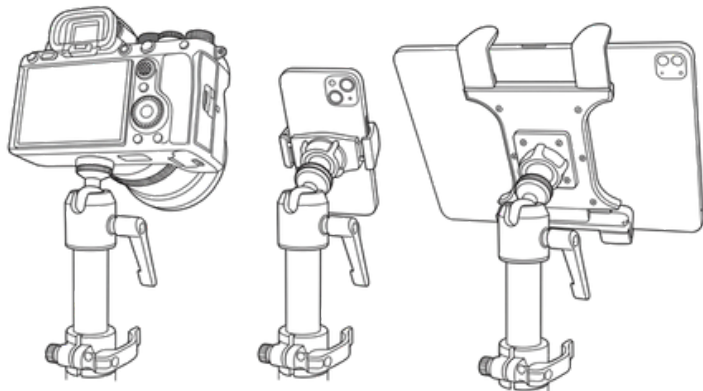


WARNING
CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system.

WARNING
Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Install the Compatible Ball Adapter

For the phone holder, attach the 17mm ball with 1/4"-20 adapter onto the clamp mount. For tablet holders, use the 22mm ball with 1/4"-20 adapter instead.

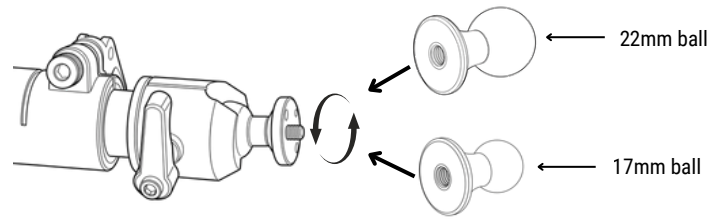

Attach the Phone Holder

Place the 17mm tightening ring over the ball, insert the ball into the holder socket, and tighten the ring securely.

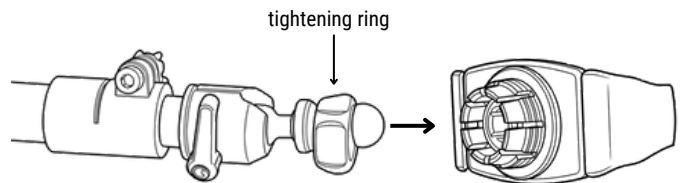

Adjustment the Mount

Release the levers to adjust the height and extend the mount, then tighten to secure. Use the knob to rotate and position the mount as needed.

