


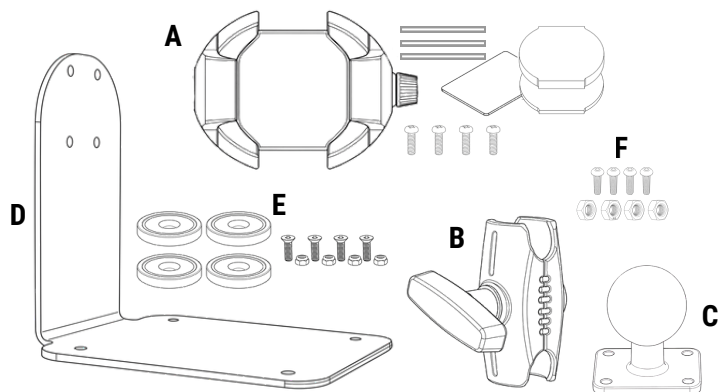

Packaging Contents

A. RoadVise® Ultra Phone Holder [RVKNAMPS]

- adhesive strips (x3)
- adhesive pad (x1)
- foam pads (x2)
- screws (x4)

B. Double Socket Shaft [SPRM3835B]

C. 38mm ball to AMPS Plate [APMAMPS38MMAL]

D. Mounting bracket [FLIFT03]

E. Magnetic bases [SPMAG35MMNH]


- screws (x4) and nylon locknuts (x4)

F. Screws and nuts (x4) [SP-12M-4M7]

Important: Clean the surface of dirt, dust, and grease before installation.


Assemble the Magnetic Bases

Install the screws through the magnetic bases and align them with the mounting bracket holes. Secure each screw with the included locknuts and tighten until firmly in place.

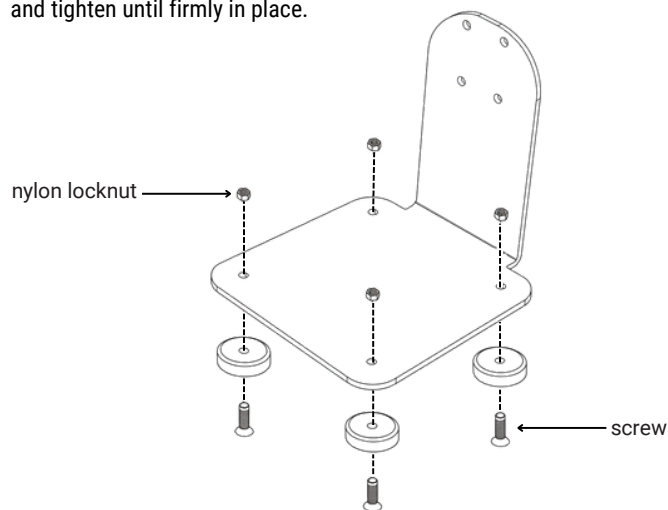

Attach the Ball Adapter to the Device Holder

Align the ball adapter with the mounting holes on the device holder. Insert the supplied hardware and tighten securely.

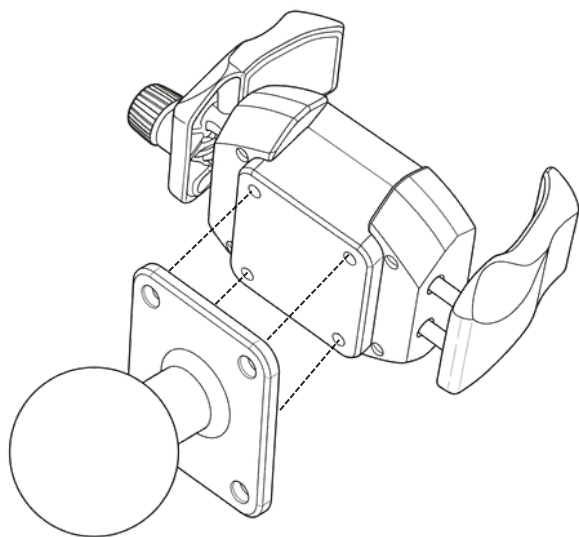


WARNING
CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system.

WARNING
Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Install the AMPS Adapter Plate

Align the AMPS adapter plate with the mounting bracket holes, then secure it using the included hardware. Tighten all fasteners until firmly in place.

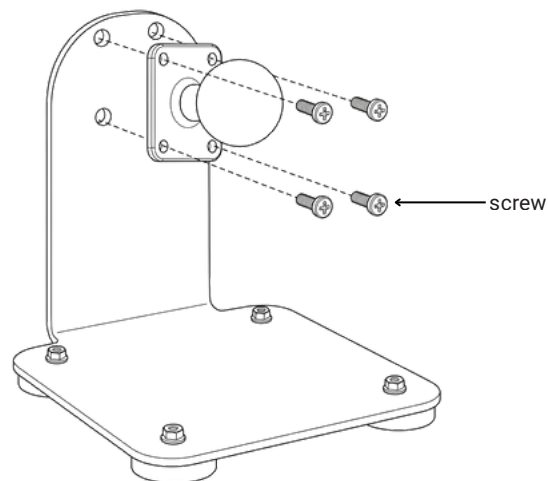


Assemble the Mount

Loosen the shaft arm by turning the knob counterclockwise. Insert both ball ends into the sockets, adjust to the desired position, then tighten the knob clockwise to secure the mount.

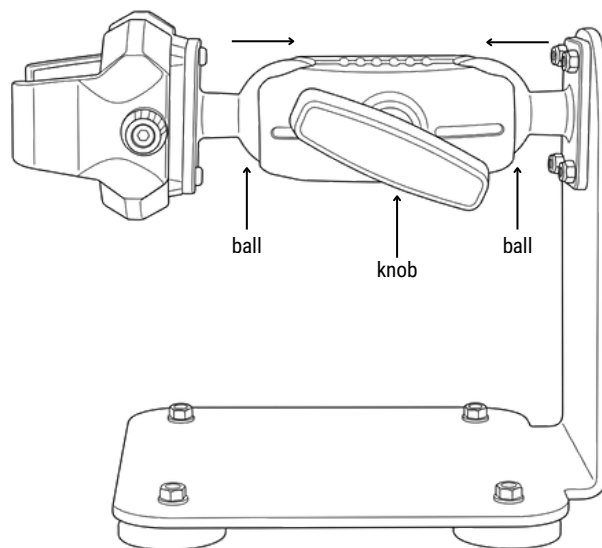


Install the Phone

Rotate the center knob to adjust and lock the holder, align for proper charging contact, then expand the spring-loaded arm, insert your device, and release to secure it in place.

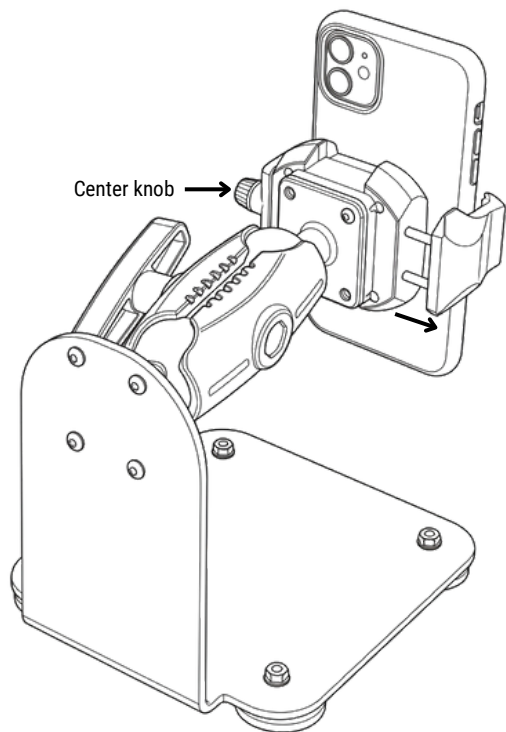


Install the Charger Paddings & Adhesive Strips


Use the foam paddings for non-MagSafe chargers, apply adhesive strips to the sides of MagSafe chargers, and for newer MagSafe charging pucks, attach adhesive pad (B) with the thinner foam to improve magnetic contact.

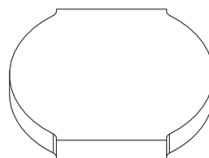

No MagSafe Puck:
Use thicker foam.

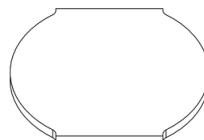

Standard MagSafe Puck:
Use thinner foam.

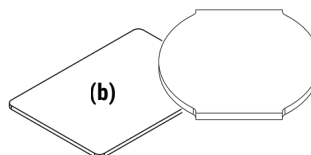

Newer Model MagSafe Puck:
Use thinner foam and adhesive pad.

WARNING
CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system.

WARNING
Ark® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Ark® products near areas that interfere with operation of vehicles. Ark® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Ark® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

