


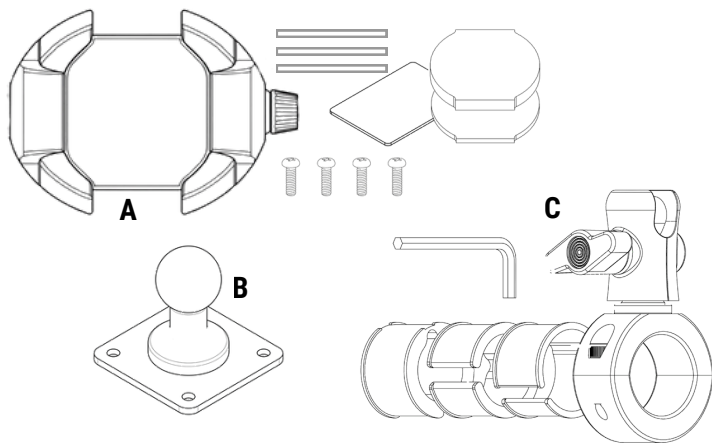

Packaging Contents


A. RoadVise® Ultra Holder [RVKNAMPSB]

- adhesive strips (x3)
- adhesive pad (x1)
- foam pads (x2)
- screws (x4)

B. AMPS to 20mm ball [AP20ALAMPS]

C. Rail base to 20mm ball socket [MC4B01B]


- spacers (x3) and hex key (x1)

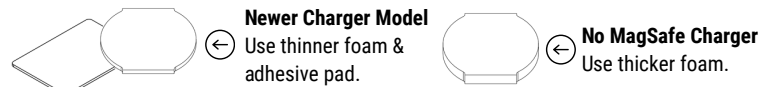

Important: Clean the surface of dirt, dust, and grease before installation.


Install the Base

Place the correct spacer ring around the rail or pole, position the base over it, and tighten both mounting screws with the included hex key until secure.

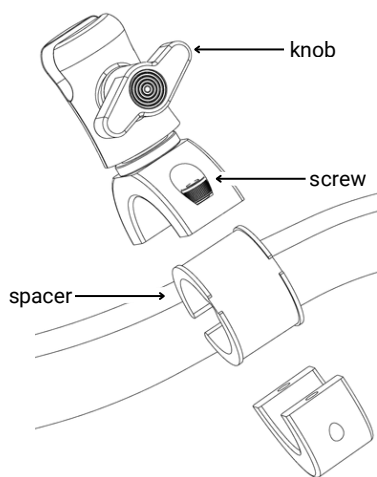


Attach the Ball Adapter to the Device Holder

Align the ball adapter with the mounting holes on the device holder. Insert the supplied hardware and tighten securely.

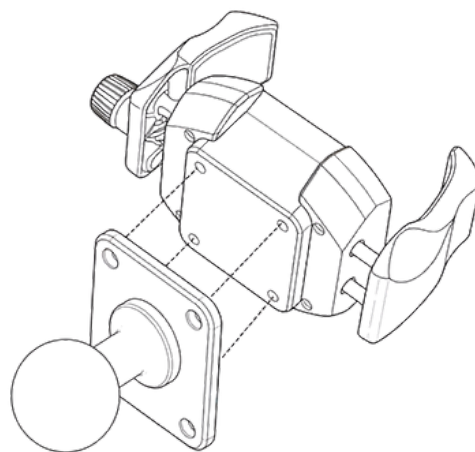


Assemble the Mount

Loosen the knob by turning it counterclockwise. Insert the ball end into the socket, adjust to the desired position, then tighten the knob clockwise to secure the mount.

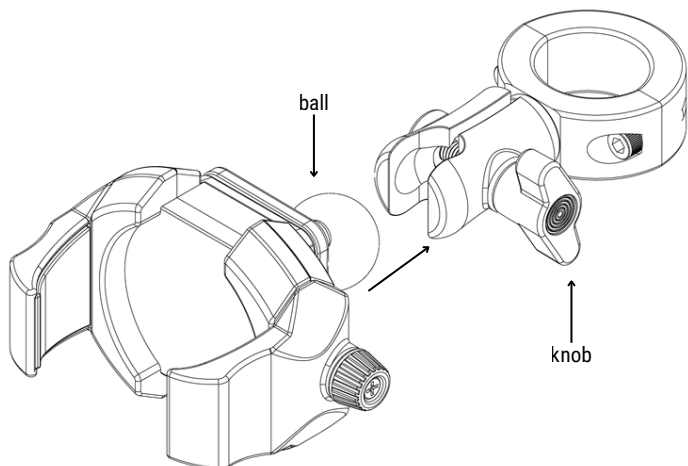

Install the Phone & Charger

Apply the required foam padding or adhesive strips to the charger. Adjust the holder with the knob, align the charger, insert your device into the spring-loaded holder, and tighten the knob to secure it.

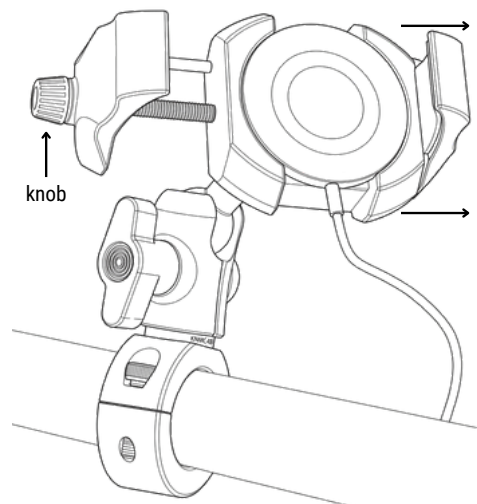

WARNING
CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system.

WARNING
Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

